


CANx wiring connection diagrams


Power supply.....	1
CAN-AO8 - analog output.....	2
CAN-CANLF - in-line repeater.....	3
CANT - line termination device.....	4
CAN-DALI - DALI gateway.....	5
CAN-PT8 - PT1000 sensor input.....	6
CAN-R4/R6/R6HC/R8 - relay output.....	7
CAN-SA2 - shutter actuator.....	8
CAN-UI10 - push-button input, LED output, PT1000 input.....	9
CAN-UI08/UI016 - analog input / digital output.....	10

Power supply

All CANx devices must be powered by a DC 24V power supply. If several power supplies are used then all GND (negative) poles must be connected together.

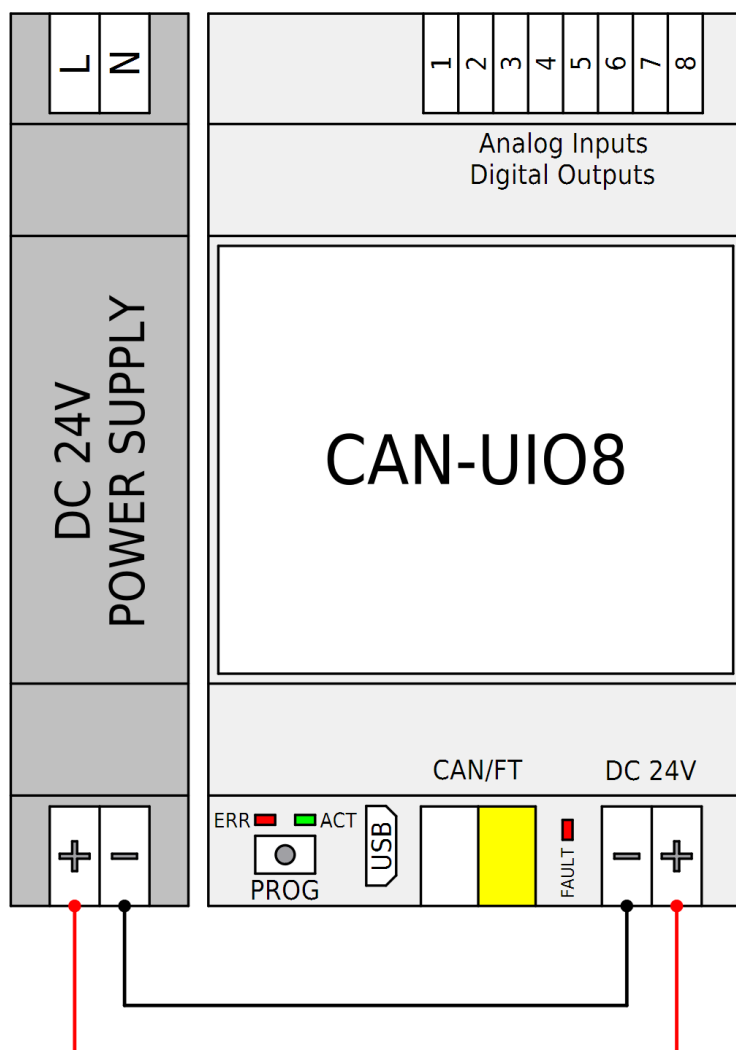


CAN-AO8 - analog output

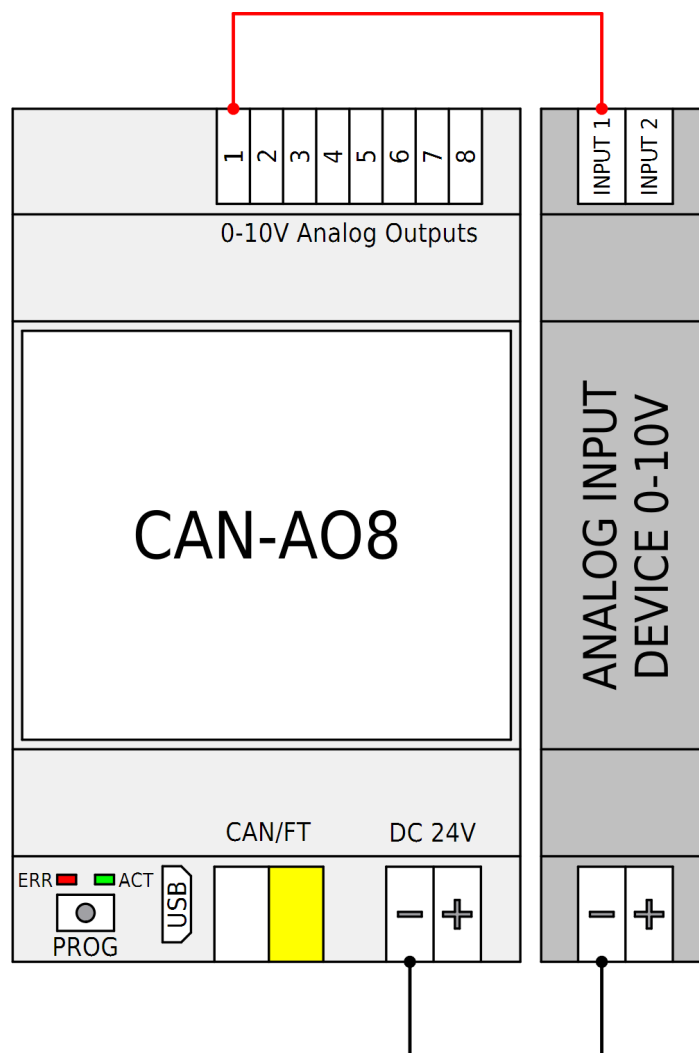


CAN-CANLF - in-line repeater

If several power supplies are used then all GND (negative) poles must be connected together.

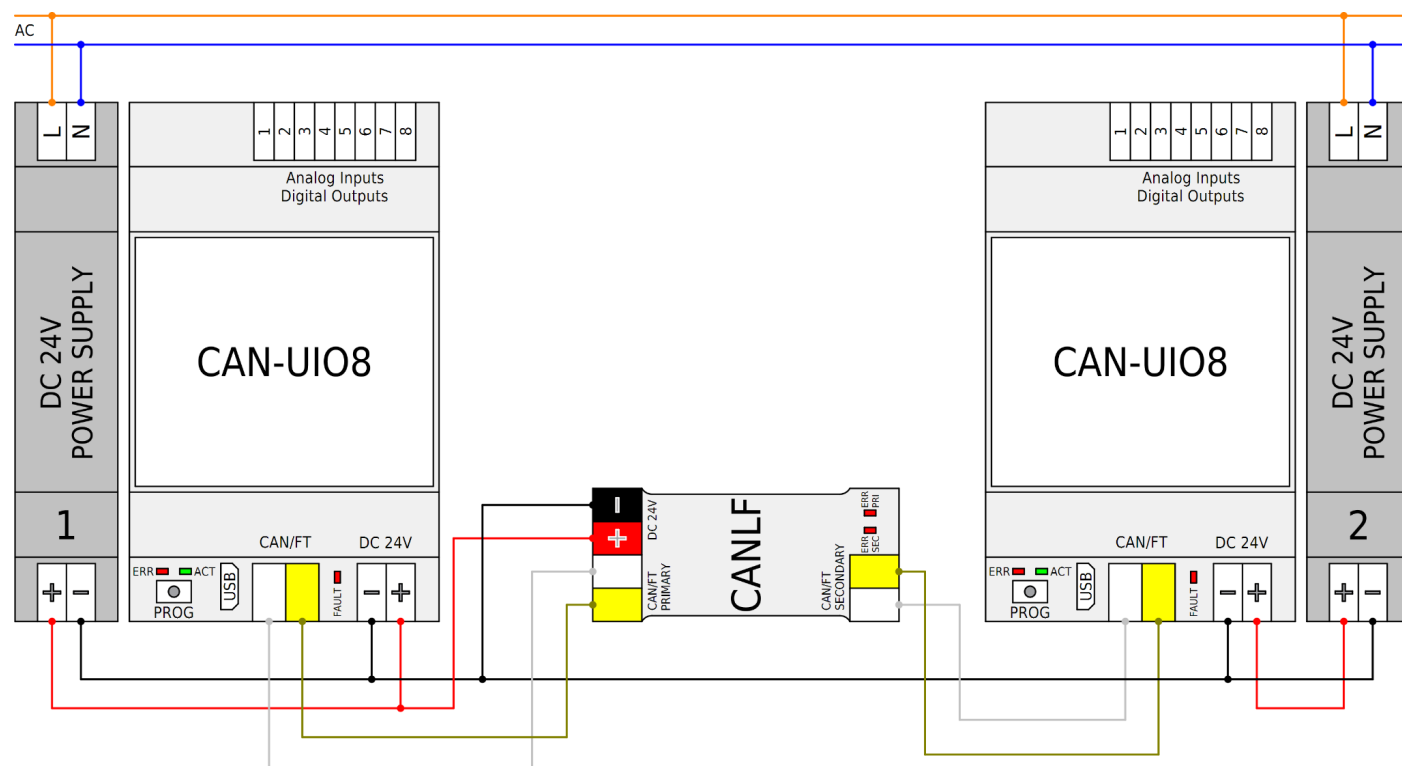


CANT - line termination device

Line termination strength can be calculated using Tools > Cable length calculator in the CANx application.

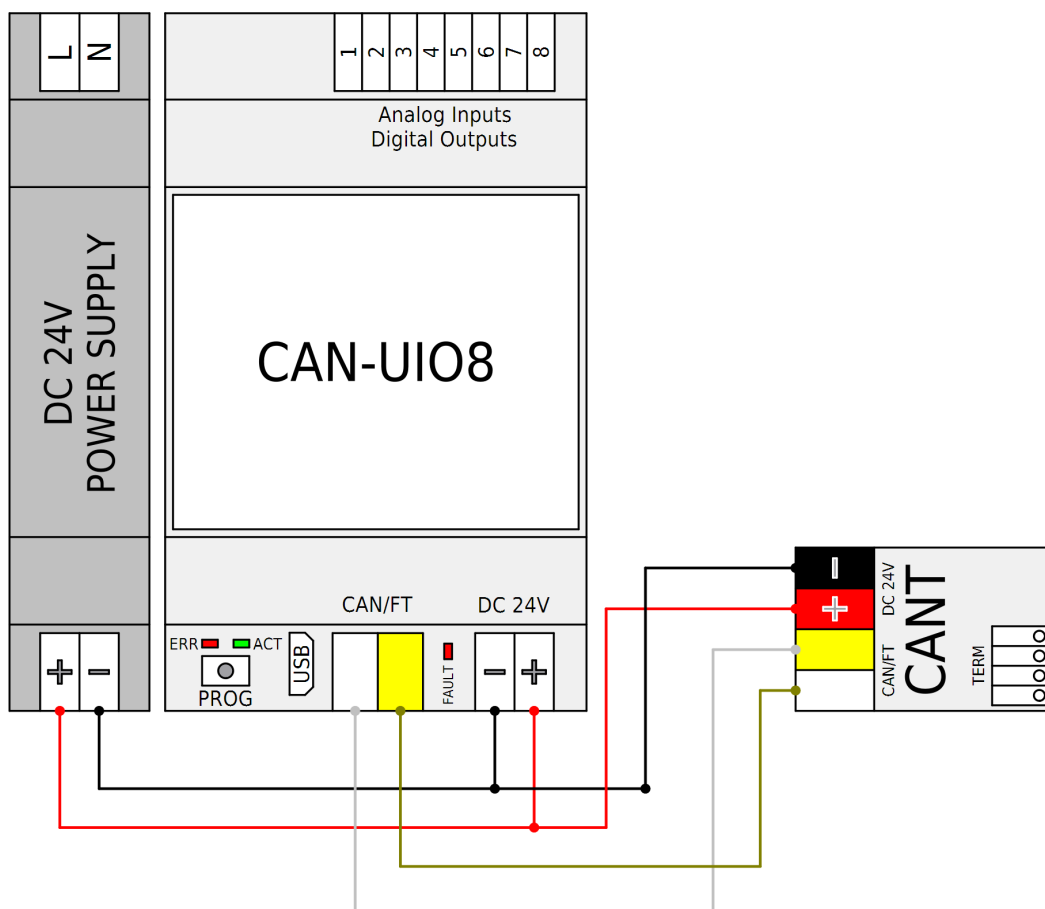


CAN-DALI - DALI gateway


Internal DALI power supply (using an external DC 18 V power supply)

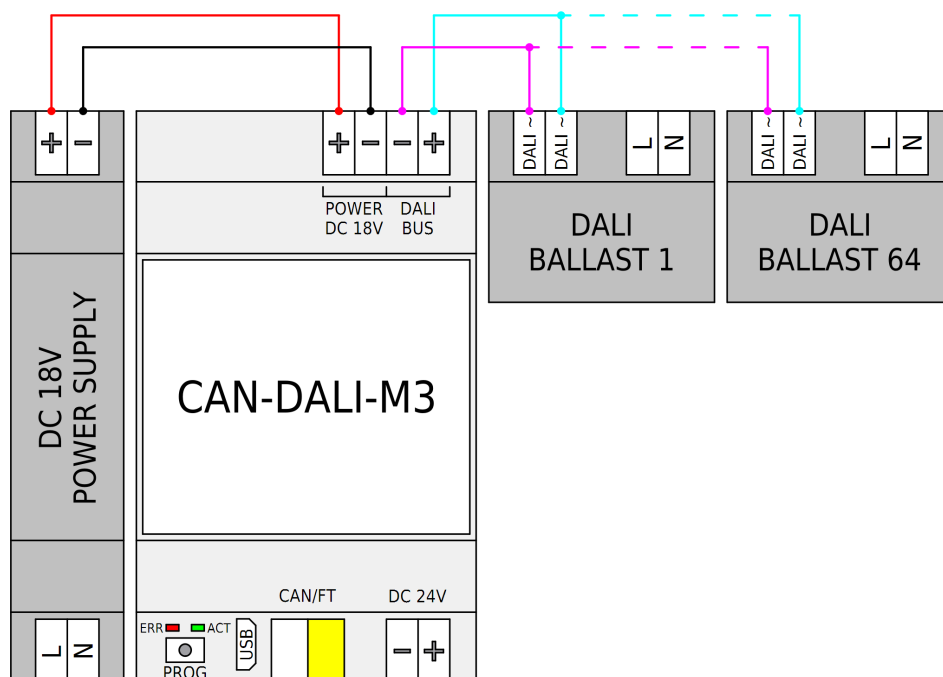



External DALI power supply

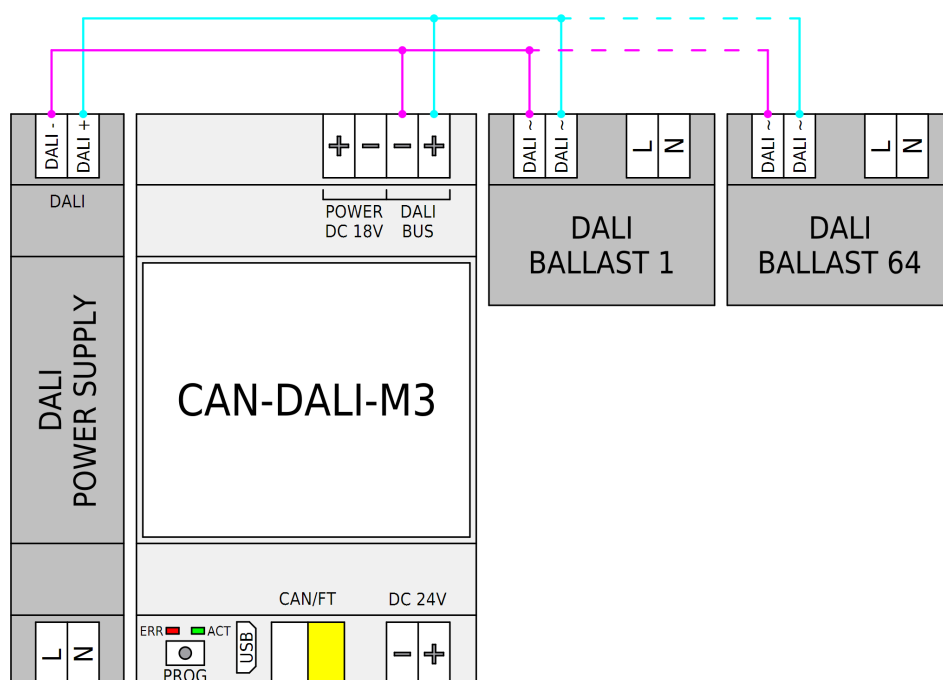


CAN-PT8 - PT1000 sensor input

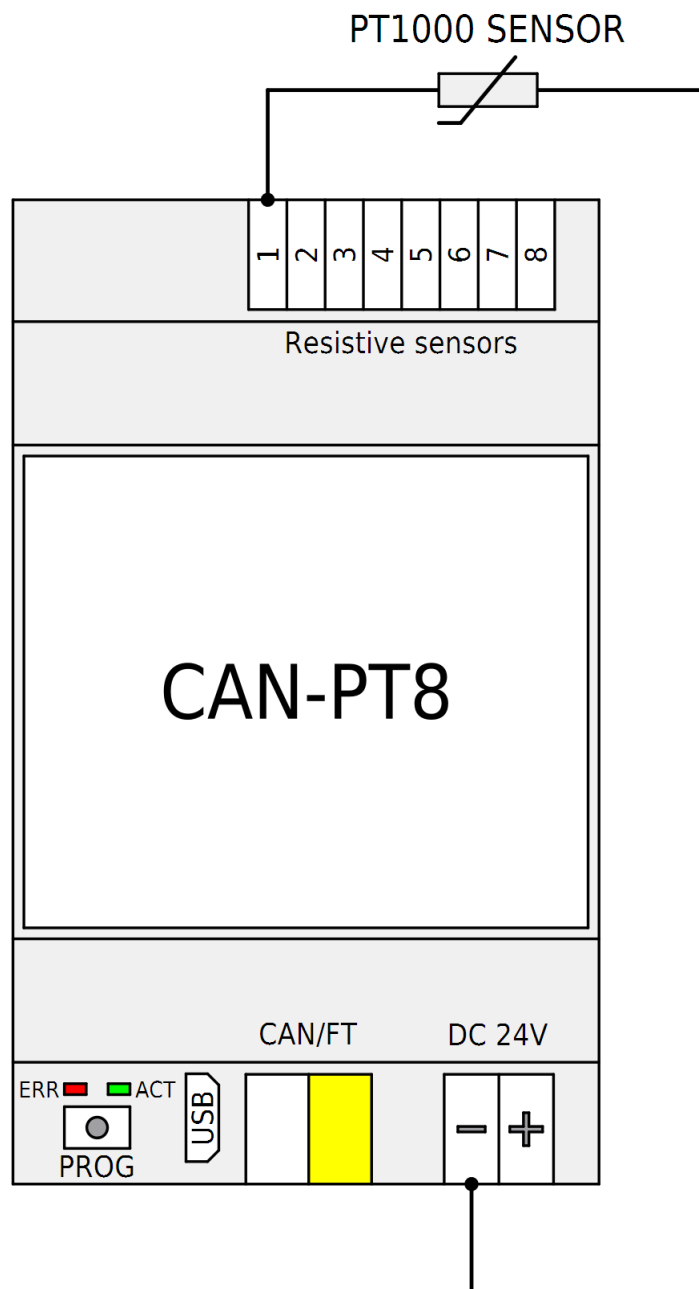


CAN-R4/R6/R6HC/R8 - relay output

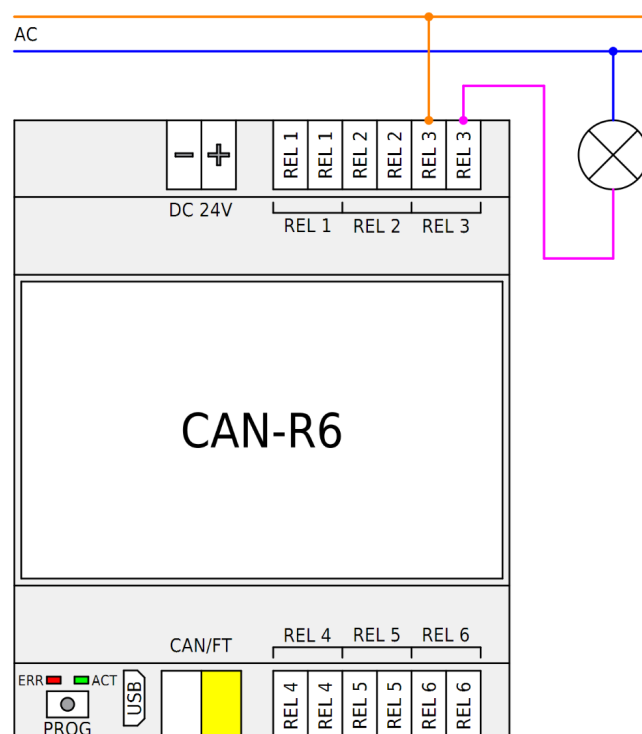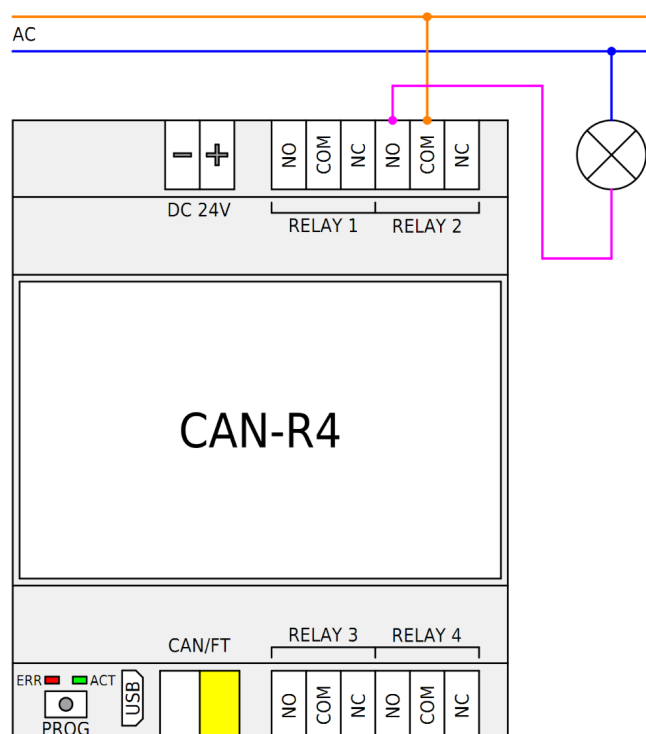

CAN-SA2 - shutter actuator

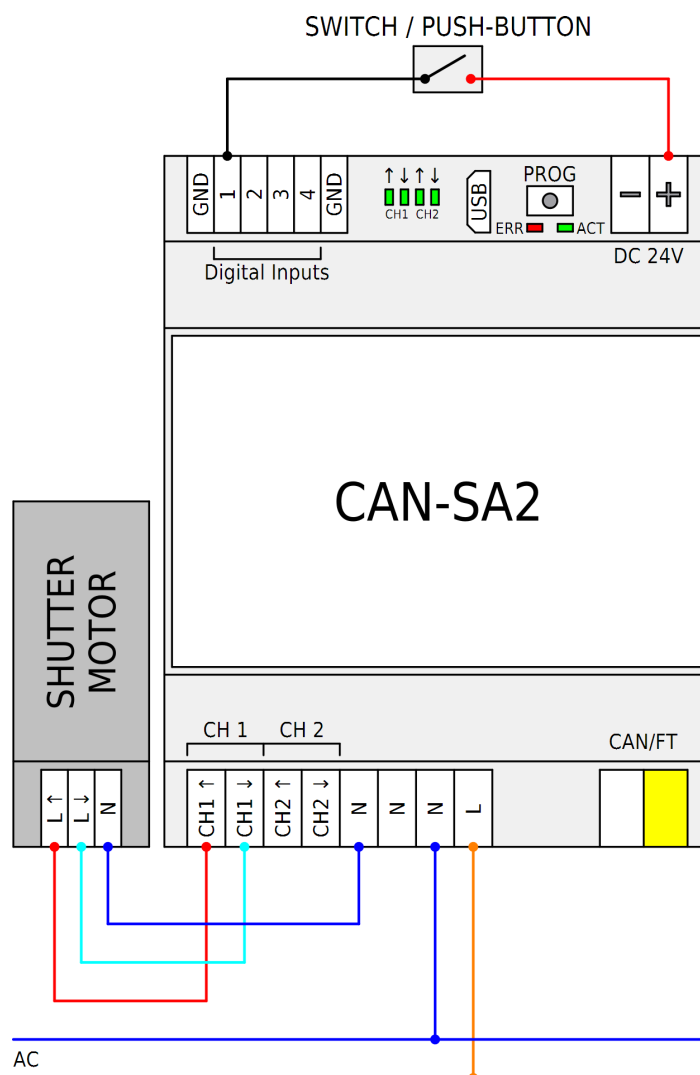


CAN-UI10 - push-button input, LED output, PT1000 input

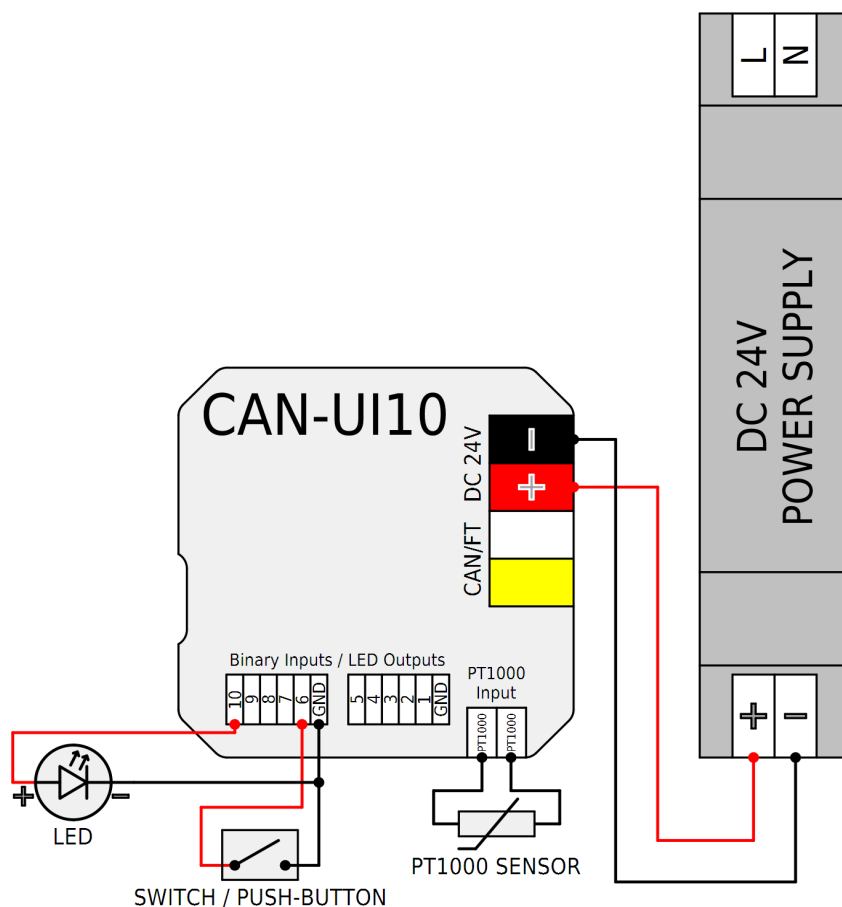


CAN-UIO8/UIO16 - analog input / digital output

Analog input

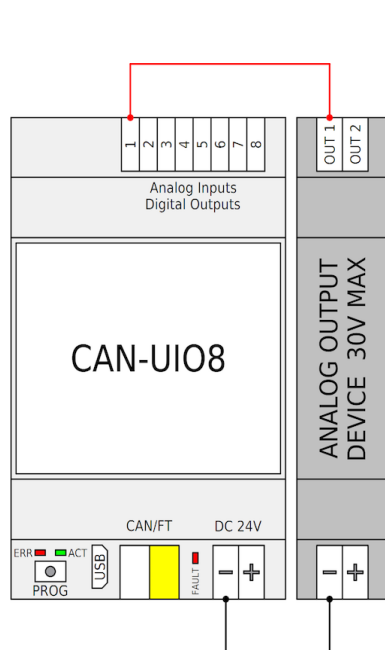

Push-button

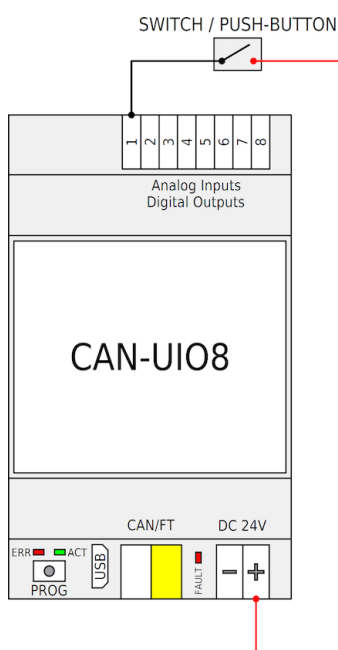

Relay output (DC 24 V)

